


CREATE
YOUR STYLE with
CRYSTALLIZED™
– Swarovski Elements



FLOWER
PENDANT

Instruction Guide





★ ★ ★ ★ ★
RECOMMENDED 5 STAR DEALER
CRYSTAL
LIZET
SWAROVSKI ELEMENTS

FLOWER PENDANT



CRYSTALLIZED™ - Swarovski Elements

Article	Product Group	Article No.	Amount	Size	Color	Color Code
	Beads	5000	26 pcs.	4mm	Siam	227
	Beads	5041	1 pc.	18mm	Crystal Silver Shade	001 SSHA

Supplies & Tools


Supplies

26x Headpins, black 0.7 x 45mm
1x Jumpring, silver, 3.8mm, 0.8mm
Leather cord, black, 2mm, 39.4"
Wire, black, 0.7mm, 7.9"

Tools

Flat nose pliers
Round nose pliers
Steel stick, 4mm
Tweezers
Wire Cutter

STEP 1: Cut 7.9" of the 0.7mm black wire and wrap it around a 4mm thick steel stick 4x.

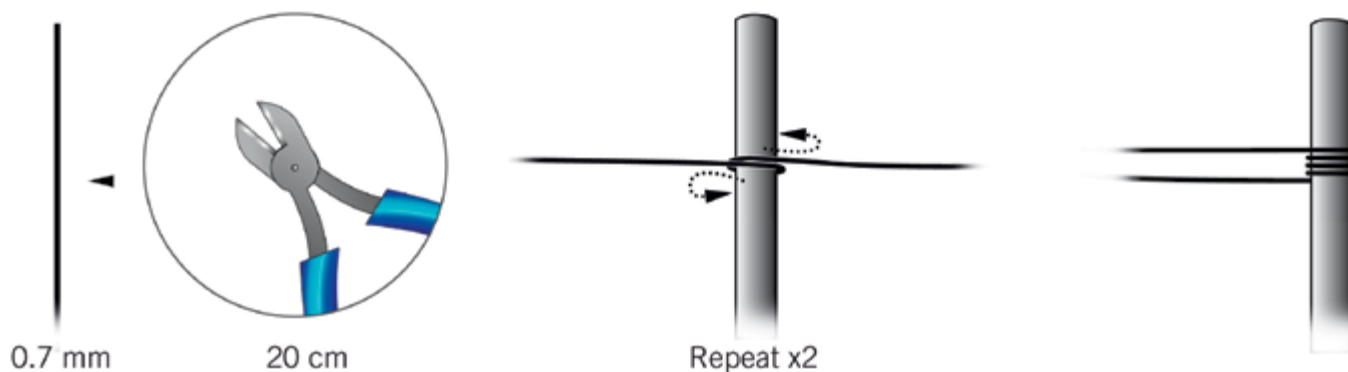


STEP 2: Turn both wire ends around each other crossing over the wraps. Remove the stick. Bend one wire end through the wrapped loop as show in the illustration and repeat with the other end of the wire.




STEP 3: Press the outside of the wrapped wire with the flat nose pliers. The wire ends will cross during the process. Bend both wire ends parallel again using the flat nose pliers as shown below.




STEP 4: Slide the CRYSTALLIZED™ Bead article 5041 onto both wire ends. Bend the two wire ends coming out of the crystal into loops using the round nose pliers as shown. Loops should be approximately 3mm.

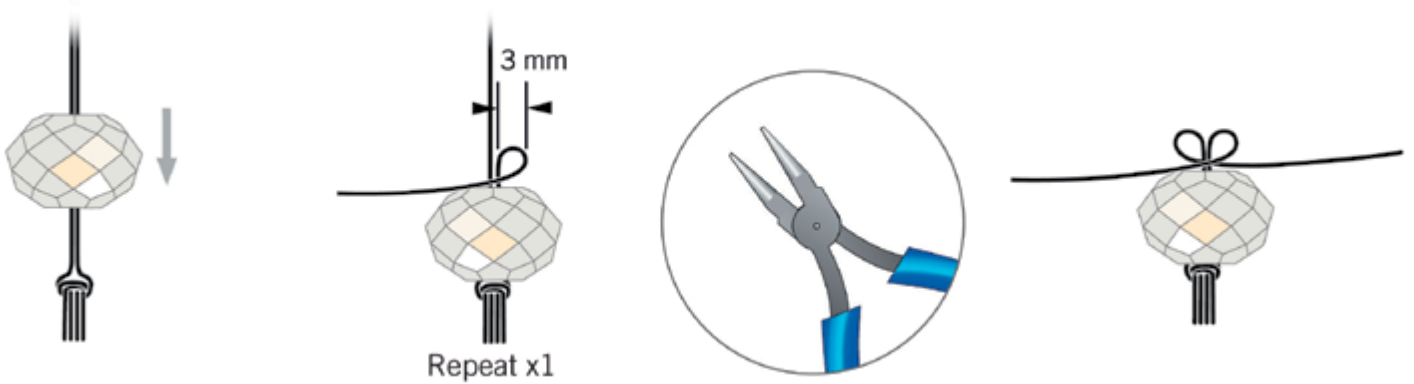


STEP 5: Wrap the wire ends around the middle axis while holding the two loops with the flat nose pliers, first one end, then the other. Cut off the ends with the wire cutter. Use flat nose pliers to press cut off the ends near to axis. Push the wrapped part inside the bead with the tip of the tweezers.

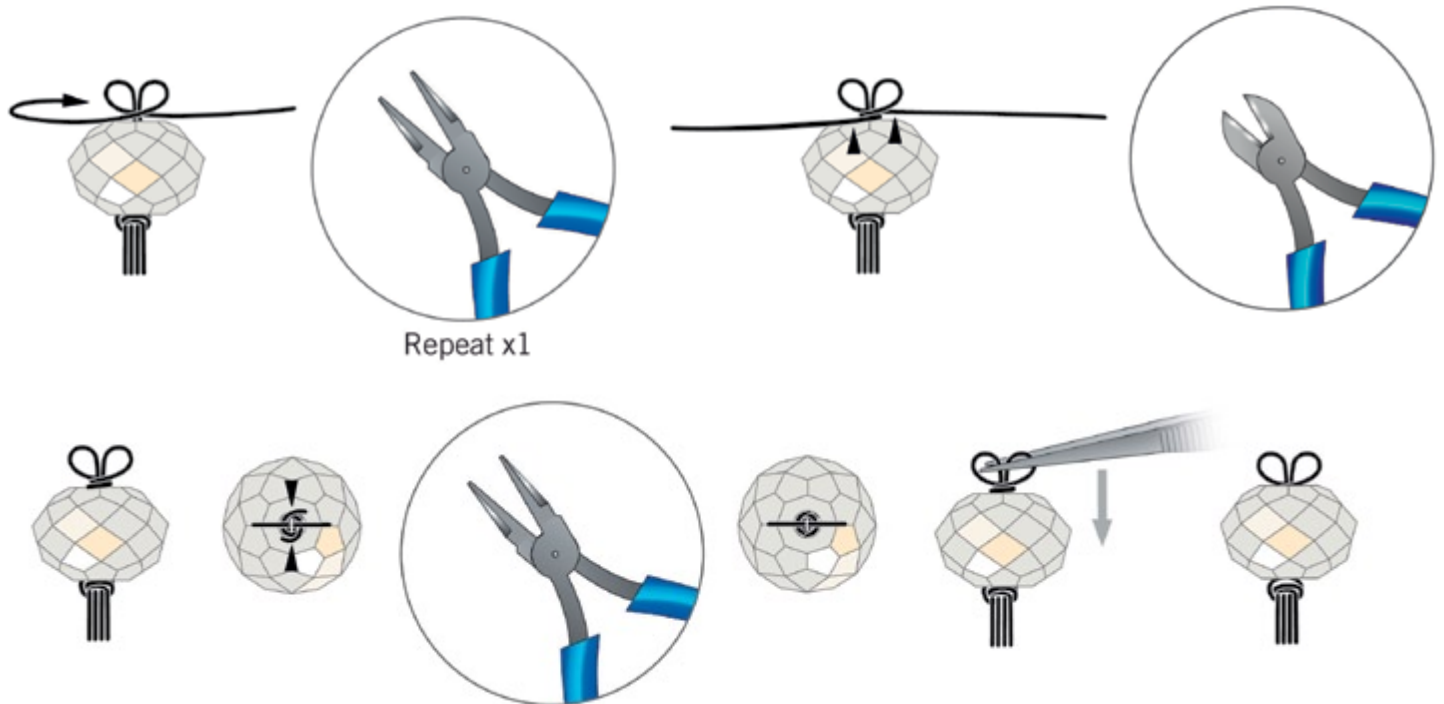


STEP 6: Grip both sides of a jump ring with flat nose pliers and open the jump ring sideways. Insert it through both loops and close the jump ring.

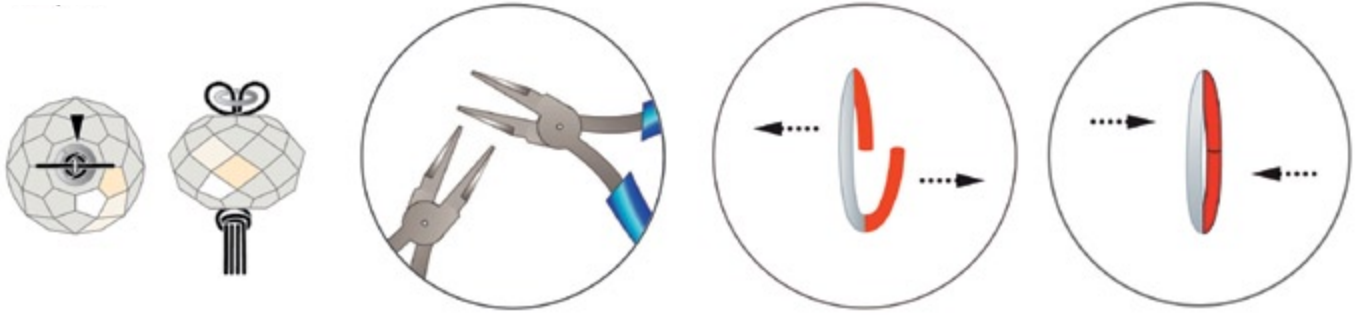


STEP 7: String one CRYSTALLIZED™ Bead article 5000 onto a headpin and form a loop as show in the illustration. To create the loop, use the round nose pliers and cut off the remaining wire with a side cutter. Repeat to make 26 pendants.

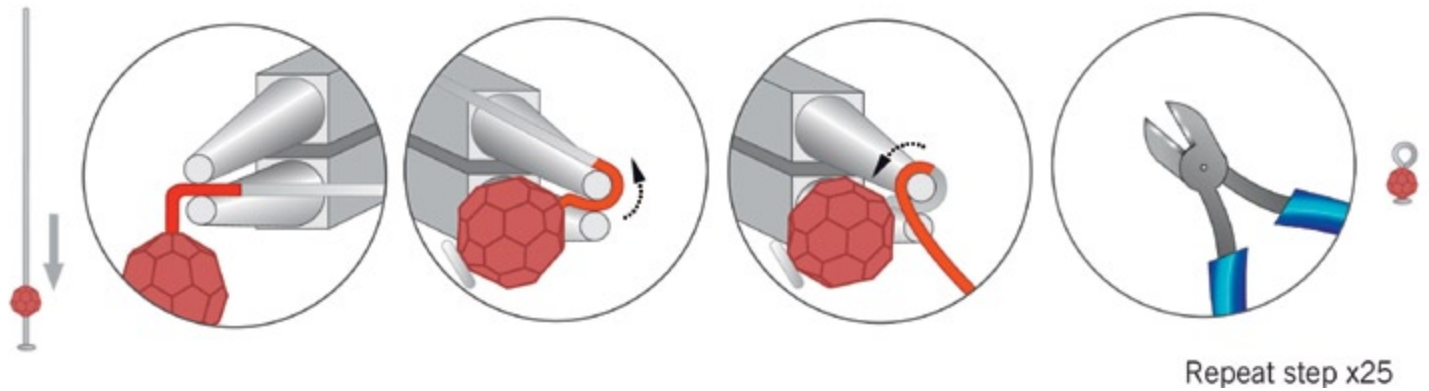


STEP 8: Open the headpin-loops of the pendants made in Step 7 sideways with a flat nose pliers and insert them into the jumping of the element created in Steps 1 - 6. Close the headpin loops. There will be 7 pendants on either side of the loops.

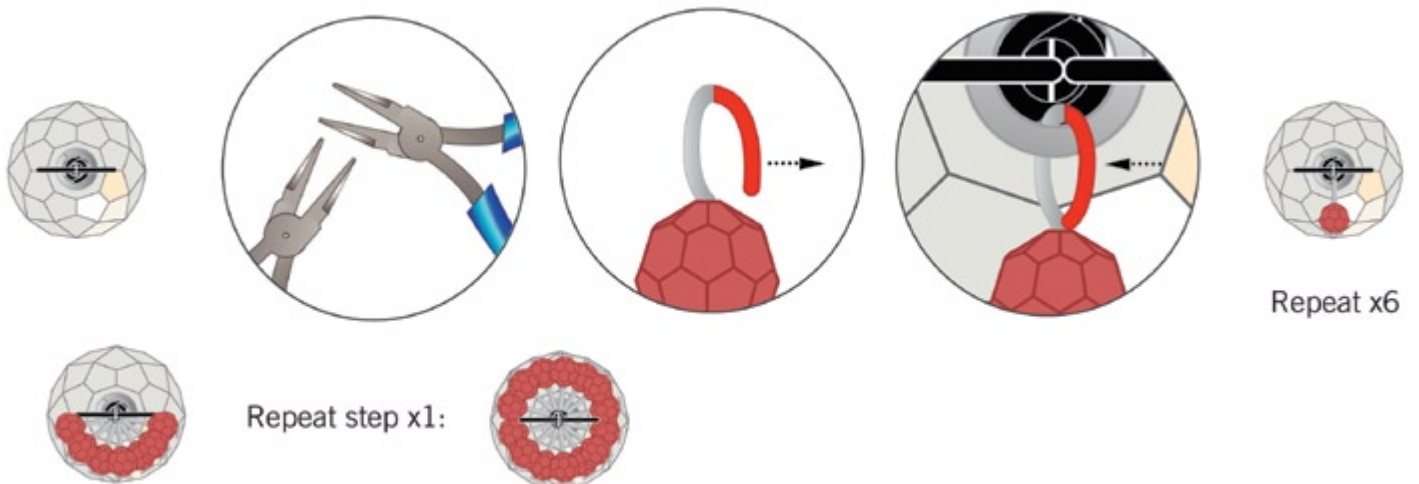

STEP 9: Attach 6 more pendants onto either of the two loops in the same was as described in Step 8. You may wish to use tweezers to slip in the open headpin-ends into the loops when it starts to become crowded.

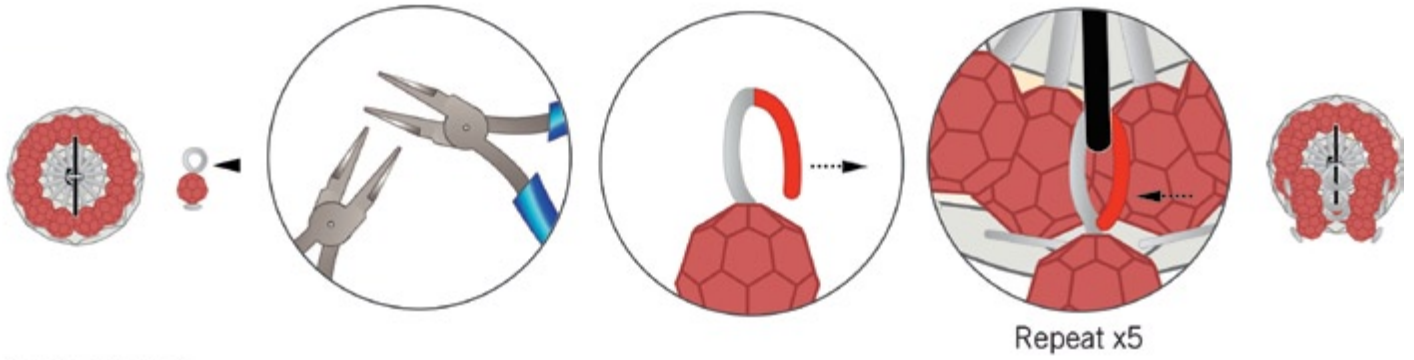

Repeat step x1:

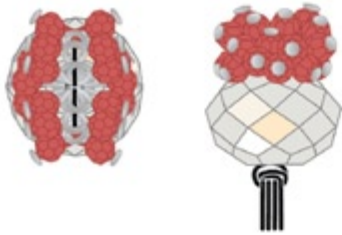

STEP 10: Cut 8" of the 2mm black leather cord with scissors. Slide it through the wrapped loop of the pendant.

